


LS-110 Media Station

Quick Installation Guide ENGLISH

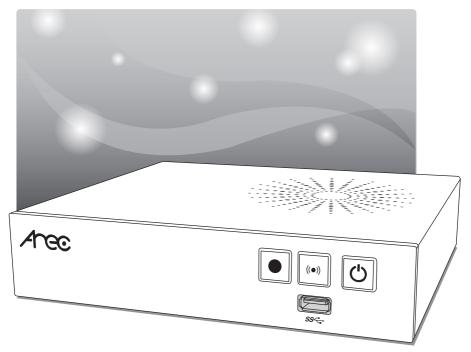

AREC Inc.© All Rights Reserved 2021. I www.arec.com All information contained in this document is Proprietary

Arcco FCC

FCC

Federal Communication Commission interference statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Warning

The equipment complies with RF exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Notice: Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

CE CF

Hereby, AREC Inc., declares that this Media Station is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

СВ

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

- the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers,table-cloths, curtains, etc.:
- no naked flame sources, such as lighted candles, should be placed on the apparatus;
- attention should be drawn to the environmental aspects of battery disposal;
- the use of apparatus in tropical climates.

the instructions for use shall state that the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Arec


Introduction

Featuring a compact and stand-alone design, AREC LS-110 Media Station consists of diverse features and functionality, including multi-signals capturing, recording synchronously, codec, streaming online, live broadcasting, and web-based monitor page, providing complete presentation or lecture capture solution.

Specifications

Product Name	Media Station
Model Name	LS-110
Dimension	200mm(L) x 178mm(W) x 43mm(H)
Weight	1.37kg
Power Requirement	12V/2A
Power Consumption (Max.)	24W (Max.)
Operating Temperature / Humidity	0°C ~ 40°C / 90%
Maximum normal load description	Supports two video inputs, including 1 video signal
	interface (HDMI input) and up to two IP Cam/stream
	signals. And output the transcoded video/audio to the
	HDMI port and the HDMI loop.

Package Contents

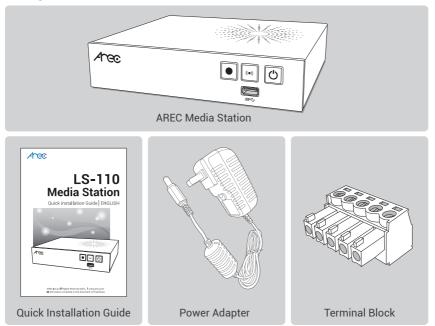


RESET

0

Product Appearance

47000

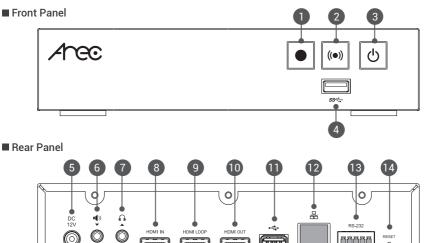


HDMI LOOP

NO.	Name	Brief introduction
1	Record function key	Control the Record and Stop function
2	Streaming function key	Turn live streaming on or off
3	Power	Power on / off the device
4	Front USB port	1.For external USB storage device*
		2.Firmware update via USB disk
		3.Available for USB mouse, keyboard
		4.Available for USB audio input (Note: Connecting an USB
		audio device via an USB hub is not recommended. It may
		cause compatibility issues.)
5	Power port	12V / 2A
6	Audio input	Line audio input
7	Audio output	Line audio output
8	HDMI In(Video Input)	HDMI input source (3840x2160@60Hz)
9	HDMI Loop(Video Output)	HDMI loop through from input (3840x2160@60Hz)
10	HDMI Out(Video Output)	HDMI previe output (1920x1080@60Hz)
11	Back USB port	Available for external hard drive to increase storage
12	Network port	RJ-45 Ethernet connector for network connection
13	RS-232	Captive screw connector for control over RS-232
14	Reset button	Restoring devices to its factory default state

NOTE: The LS-110 can detect and record to USB storage devices using FAT32, NTFS file systems.

Aree

Connection

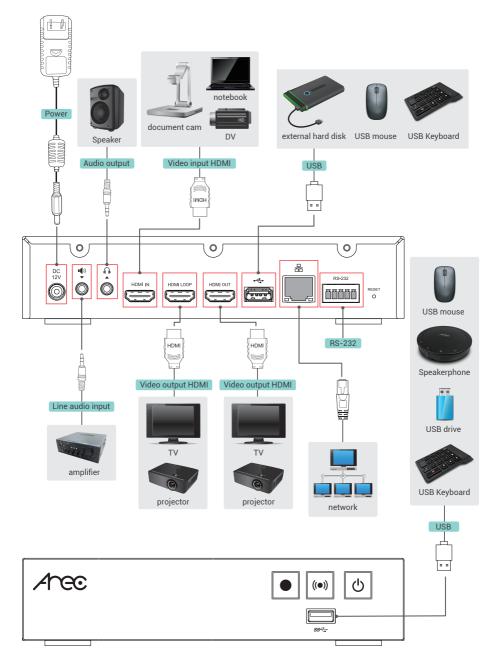


Arec

Accessing the Administrator pages

Use the RJ-45 Ethernet cable to connect an IP-based network to the LAN port. Enter the IP address displayed in the lower right side of the screen in your browser to access the System Administration webpage.



Log in Administrator 🛞 with default username admin and password admin, then entering System Administration webpages.

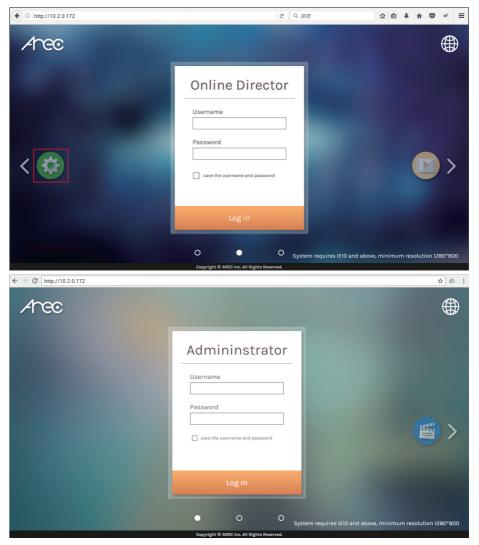

Setup

Step 1: Set up video input name, video source, PTZ control in [Video inputs] of [Media I/O]. The capture source can be from HDMI input, network camera, or encoder input.

🏎 Media I/O	Video inputs	
Video inputs	0	Ŷ.
Network device manager	•	10
	Name :	Signal type : HDN
Audio	Content	
Display	Signal type :	
🗰 Video	Video port	
	Video source :	
Storage	нрмі і	
Upload	STOWER B	
🕻 System	PTZ control :	
Account	Serial port	

If the desired video source is network camera, a login authentication with the camera is required firstly in the [Network device manager] setup tab of [Media I/O].

Video inputs	Network camera					
Network device manager	Network camera	as				
PTZ control port	👌 Refresh	IAN I	WAN			
Audio			10 17 19 10 10 10 10 10 10 10 10 10 10 10 10 10		1 January 1997	
Display	Host name	IP address	MAC	Brand	Status	Connected
Video >	AREC	10.2.50.118	00:D0:89:0E:51:64	AREC	ОК	ОК
Storage	CI-T21H	10.2.50.144	E4:77:D4:01:18:B8	CI-T21H	ОК	ОК
Scheduler	CI-403	10.2.50.115	00:D0:89:17:19:E3	CI-403	OK	ОК
Upload						
€ System >	Auto-Tracking N					
Account	Auto-Tracking r	nount				

Make sure the network camera are connected under the same IP network (LAN)* and go to the [Network device manager] page. After the scanning is done, click the Login button and the authentication dialog will pop up. Enter the username and password of the camera to complete the authenticationand change the status to [OK]. Then the camera is ready for video input selection. Select the desired camera by its IP address. For video source of encoder, enter RTSP or RTP connection URL.

* For instance, the camera and LS-110 connected under the same router with the same LAN address.

Router(192.168.0.1) – LS-110(192.168.0.10)

Name :	
Cam 1	
Signal type :	
Encoder	\sim
Protocol :	
RTSP	\sim
Primary URL :	
192.168.11.202/h264	
Secondary URL :	
PTZ control :	
Not set	\sim

Arec

Step 2: Set up audio volume in [Audio] of [Media I/O].

**	Media I/O	\sim	Audio	
	Video inputs		Input volume control	
	Network device manager			
			Audio input 1	
	Audio		Line in and HDMI 1	
	Display		■()) <u> </u>	
	Video	>	Audio input 2	
-	Storage		Mic in and HDMI 2	
	Scheduler		I() 100	
±	Upload			
×	System	>	Wireless Mic	
	Account		■()) ———————————————————————————————————	
			Current volume	

Step 3: Set up date and time of host machine in [System settings] of [System].

•••	Media I/O	> sy	ystem settings	
	Video	>		
	Storage		Device identification	
曲	Scheduler		Hostname :	Hostname follows RFC-852 internet host table specification.
±	Upload		LS-110	
×	System	\sim	Device description :	
	System settings		LS-110	
			Brand :	
			AREC Inc.	
	Configuration		Model :	
	Account		LS-110	
			Serial number :	
			MAC :	
			30:45:11:83:82:F2	
			Apply	

Getting start a recording

Start a recording from the front panel


Press [\bullet] button and recording begins. The LED indicator of [\bullet] button is red to indicate active recording.

Press [•] button to end a recording.

Aree

Start a recording via the Online director

Entering the Online director webpage via [System Administration] by clicking the [) button and opening a new tab; or log in Online director from the initial login page with default username director and password director. Both ways lead to the Online director control panel for web-based users.

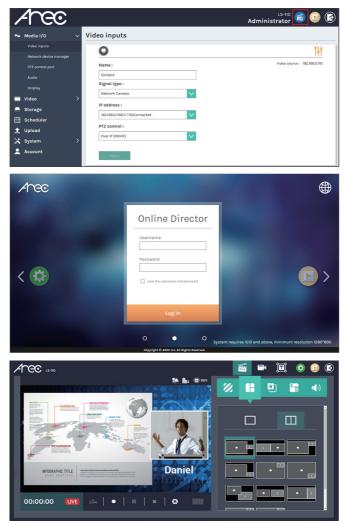

The Online director allows user to control recording and have a live stream view of the output video. The control panel makes it easy to apply layout, select background, and control the audio recorded during the recording process.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Important Security Policy

Precautions

- 1.Please open the product package carefully; we recommend you keep this packaging for future transport, storage or maintenance use.
- 2. There are no switches or adjustment buttons required for operation inside this product, so for your safety, please do not open the casing on your own, or vigorously rotate, shake or use any other inappropriate ways to operate this product in order to avoid electrical shocks and voiding the warranty. You can contact a local dealer directly if you have any questions.
- 3.Heat will be generated during the use of this product; therefore there must be sufficient ventilation for the temperature of the unit to remain at a stable status. So please use the product under normal environments to prolong the usage life, and avoid installing it in the following environments.
 - Locations that are unstable or have incomplete planes
 - Locations with powerful magnetic fields
 - Locations where it is damp or may have water leakage
 - Locations that are too hot, close to heaters and air hoses, or be exposed to direct sun light for long periods of time
 - Locations that are dusty
 - Locations where there are possible shocks
 - Locations close to power amplifiers
- 4.If you notice smoke or odor coming from the product, please quickly remove the power cable and send it to a maintenance center for processing.
- 5.To avoid electrical shock, the plug of the adapter should be stably and completely inserted into the power outlet and cannot be exposed; it must also have sufficient capacity to withstand the current transmission. Please do not plug the adapter into the power outlet before connecting the cable in order to avoid danger.
- 6.If not used for long periods of time, please unplug the power plug, and to ensure electrical safety, when unplugging the adapter, please hold the plastic part of the adapter with dry hands and then unplug the adapter. Please properly connect the cables according to the printed instructions on the installation manual and the machine to ensure optimized usage effects.
- 7. The USB ports of this product are designed for firmware updates, and people must equip with ESD protection devices when using them.

When the USB Ports are damaged by an ESD impact, the product will automatically enter the protection state. Once in the protection state, the product must be restarted.



AREC Inc.© All Rights Reserved 2021. I www.arec.com All information contained in this document is Proprietary



Made in Taiwan Date : 2021.7.22 Version : 2.20